

2238 REPEATING CYCLE TIMER OPERATING INSTRUCTIONS

Overview

The 2238 timer turns power on and off repeatedly to a fogger or other appliance. Plug the 2238 into an electrical outlet, and plug the fogger into the 2238's receptacle.

Depending on its size, the receptacle may be located in the enclosure, or on a wire pigtail like an extension cord.

Models of the 2238 are available with receptacles and plugs for various countries.

Operation

With the power switch off, plug the 2238 power cord into a wall outlet and plug the fogger or other appliance to be controlled to the 2238 receptacle. The attached load should not exceed the contact rating of the 2238.

Turn the power switch of the fogger or appliance to its "on" position.

Use the two dials to set the length of the "ON" and "OFF" cycles (1-100 minutes). Hash marks on the label represent about 16 minutes each.

Each dial has a lock nut to secure its setting. Loosen the nut slightly so the dial turns freely. The dial has a *one-turn* limit; do not force a dial past its limit. If you encounter resistance, check that the lock nut is free, and turn the dial the opposite direction to confirm it is operating smoothly.

Tighten the nut on the dial to lock the setting.

Turn on the power switch of the 2238. It starts an "on" cycle, delivering power to the receptacle, and continues to cycle power until turned off.



Specifications

<u>Model</u>	<u>Voltage</u> 50/60Hz, 1ø	<u>Plug/Outlet</u> <u>Configuration</u>
223811	110-120V	NEMA 5-15
223811J	100V	UC831A
223821	220-240V	NEMA 6-15
223821E	220-240V	Schuko
223821U	220-240V	UK
223821A	220-240V	Australia/China

Contact Rating 15A @ 240V (inductive load)

Cycle Time 1-100 minutes, adjustable

THE
Fogmaster[®]
CORPORATION

1051 SW 30th Avenue • Deerfield Beach, FL, USA 33442
Tel: 954.481.9975 • Fax: 954.480.8563
e-mail: info@fogmaster.com • <http://www.fogmaster.com>

Warranty

This product is warranted for one year from the purchase date against defects in materials and workmanship. If you have a warranty claim, return the unit freight prepaid to The Fogmaster Corporation. We will repair or replace (at our option) any defective parts and return the unit to you.

Motor brushes and tank gaskets are not covered under warranty.

This warranty does not apply to any unit which has been: subject to misuse, neglect or accident; used for a purpose for which it is not designed; altered in any manner; serviced by unauthorized parties; or subjected to any but the specified voltage.

This warranty is limited to the original purchaser only, and does not include claims for incidental or consequential damages resulting from the non-function or malfunction of this product or for breach of any express or implied warranties.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This Limited Warranty notice replaces any other warranty or guarantee information accompanying this product or appearing in any literature referring to this product. Any implied warranties, including merchantability or fitness for a particular purpose, shall not extend beyond the warranty period.