


The 9031 Tank Insert can help when the fogger's standard 1-gallon tank is too big for a small treatment. It has a capacity of 32 ounces (1 liter) and indentations at 4-ounce intervals to show how much liquid you add. A small sump in the bottom ensures that it can be emptied completely, with all chemical on target and none wasted.

Draining the tank brings other benefits as well: no "left-overs" for future treatment; no chemical degradation in storage; and no need to label the tank's contents.

The 9031 Tank Insert is reusable, made of durable Kydex[®] plastic for strength and chemical resistance.

Installation is simple – just drop the insert into a standard tank; it's compatible with both the 050 aluminum tank and the 050SS stainless steel tank, with no change to the tank gasket or cover plate.

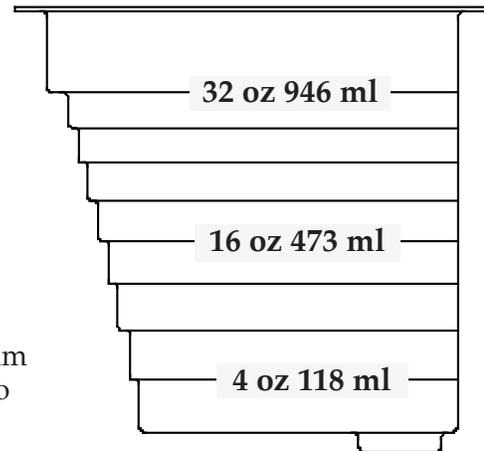

Tank Insert - Side View

USE INSTRUCTIONS

Remove the power head, place the 9031 tank insert in the tank and rotate so the sump aligns with one of the tank clamps (call this the "sump clamp").

Calculate how much chemical you need for your work. Measure the liquid separately, or directly in the tank insert using the indents as a guide; each step is four ounces [118 ml].

Align the power head so its *left* handle is above the "sump clamp" and the suction tube drops into the sump recess. Tighten the tank clamps and proceed with your work.

When finished, remove the power head and tank insert, rinse or wash, and air dry. Do not heat to dry as that could warp the insert.

